

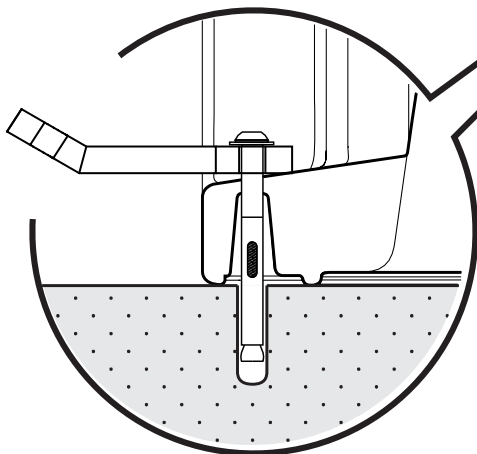
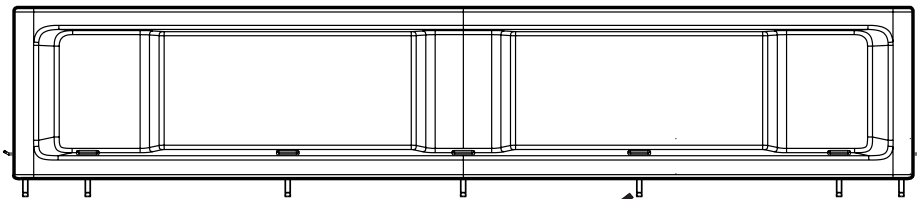


Endurance® Bed 0.0


CORTECH

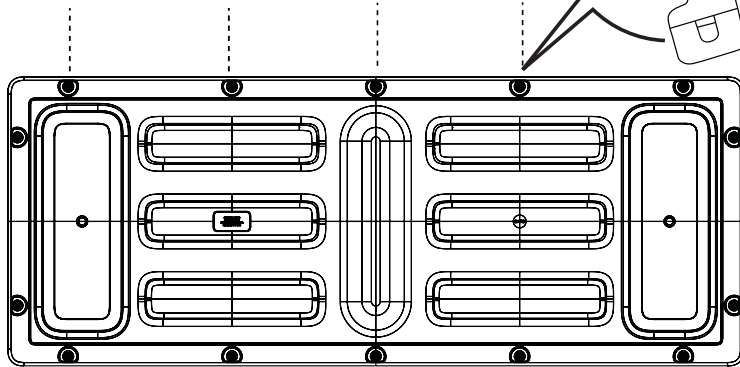


You will need:

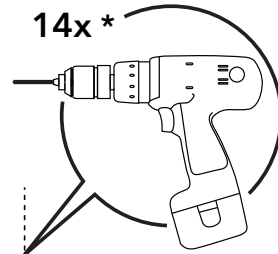


1x
Pencil to
mark floor

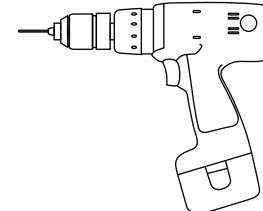


1x
Drill with
3/8 bit



14x *
3/8 - x 4 3/4
Security TORX
Anchor Bolts



14x
Flat Washers

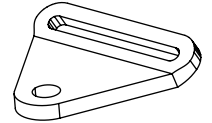

14x
Restraint Rings

- 1.** Position bed on its back to access the bottom.
- 2.** Select and drill up to 14 mounting locations on the bottom of the bed.
- 3.** Place bed right side up and position it in location where it will be secured to the floor.
- 4.** Using a pen or pencil, mark mounting hole locations on the floor using the pilot holes drilled in Step 2.
- 5.** Move bed and drill holes in each location where you marked the floor. Hole depth should be 2" MINIMUM.
- 6.** Replace the bed lining up the drilled pilot holes with the holes in the floor.
- 7.** Place one flat washer over each of the anchor bolts. Guide the bolts through Restraint Ring and the bed's pilot holes, and into the holes in the floor.
- 8.** Tighten each anchor bolt 3-5 turns past finger tight.

*The amount of hardware to be used (up to 14 pieces) is at the discretion of the user/installer based on the environment and floor.