



Endurance Bed with Riser 2.0 Installation Instructions

CORTECH

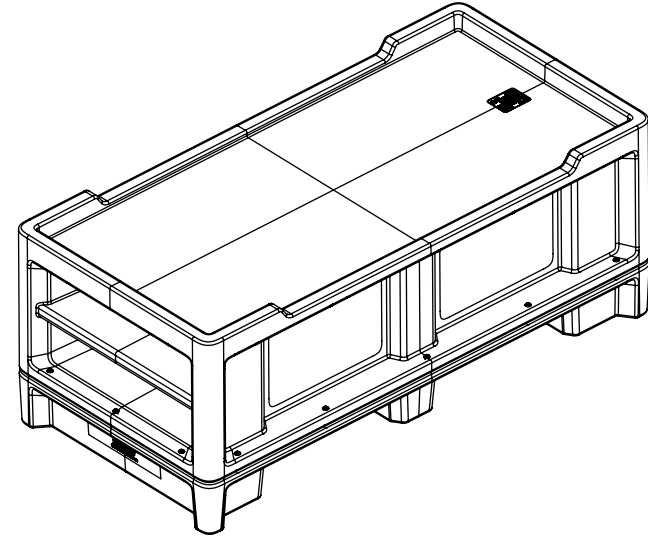


You will need:

Not Included:

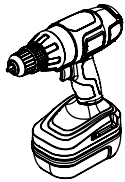

1x
Drill
With 3/8" Masonry Bit
and 3/8" Drill Bit




1x
3/8" Socket Wrench




1x
Pencil
For Marking

Included:

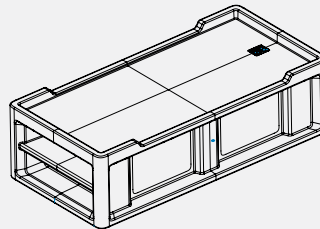


1x
Endurance Bed 2.0

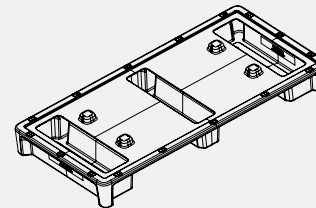


1x
Endurance Riser 2.0




9x
3/8" - 3 3/4"
Security TORX Anchor Bolts



16x
Washer
13/32" ID - 7/8" OD




16x
3/8" - 18
Nylon Locknut




16x
3/8" - 3 3/4"
Tamper Resistant TORX Bolts


Endurance Bed with Riser 2.0 - Installation Instructions

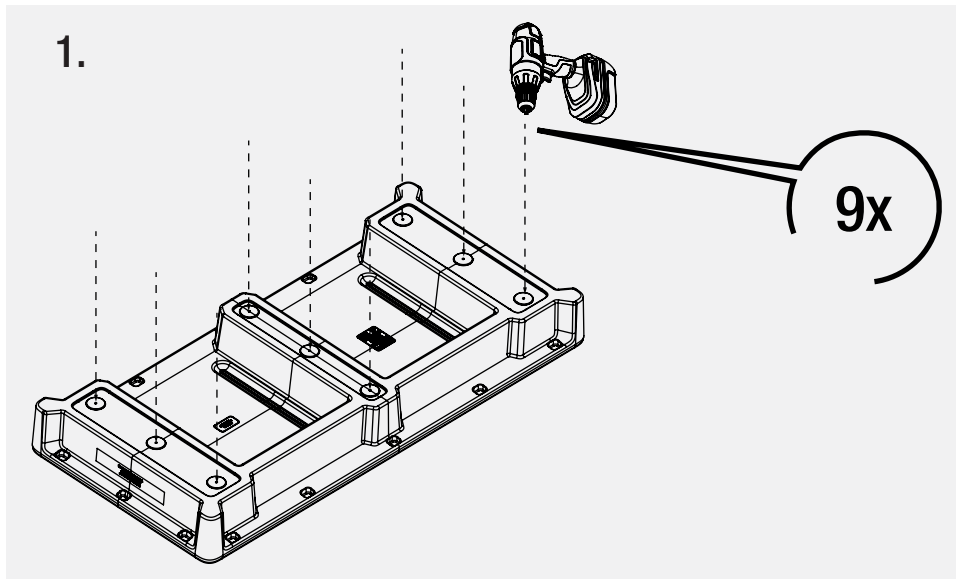


Drill out the 9 drill locations as shown in the bed riser.

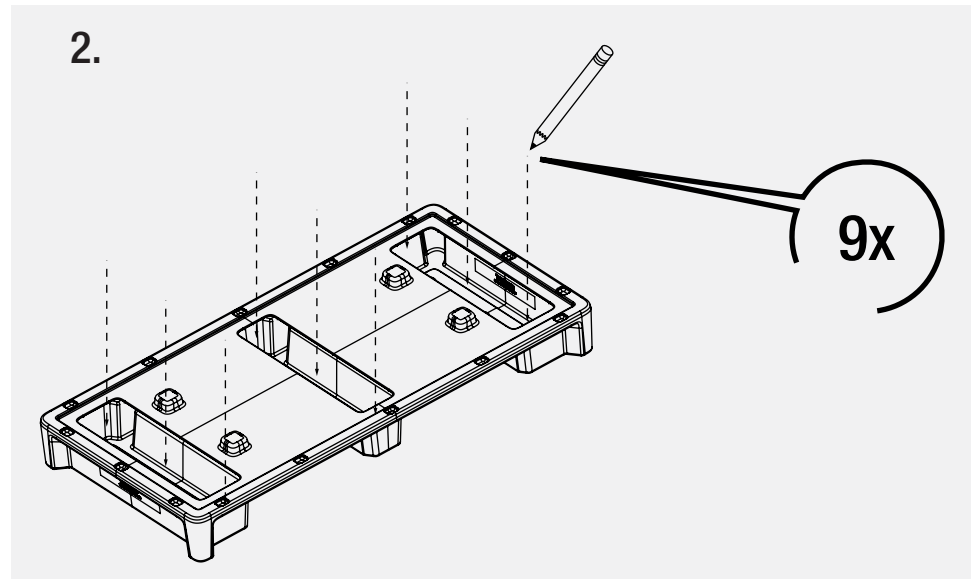

Lay down the riser and mark the floor.

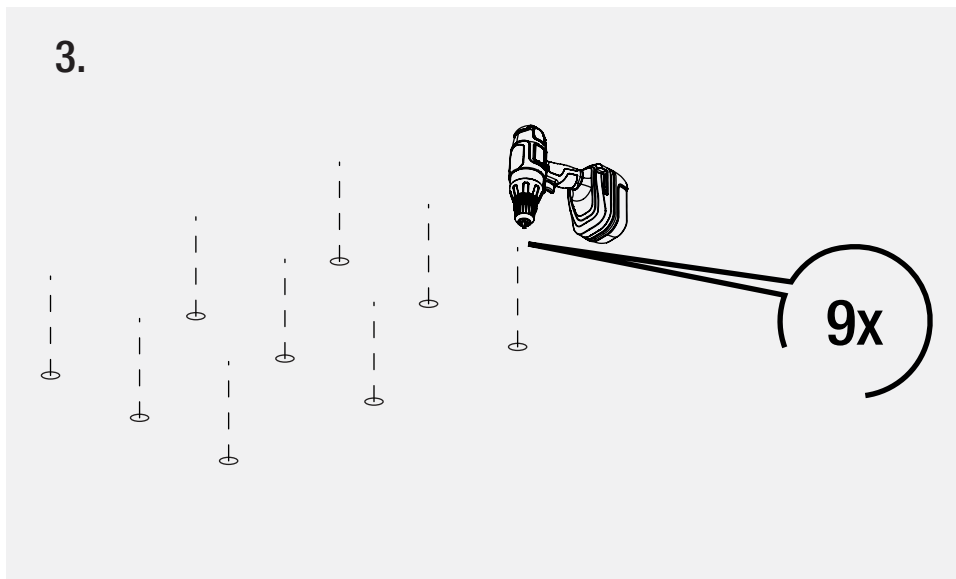


Drill out the holes into the floor.

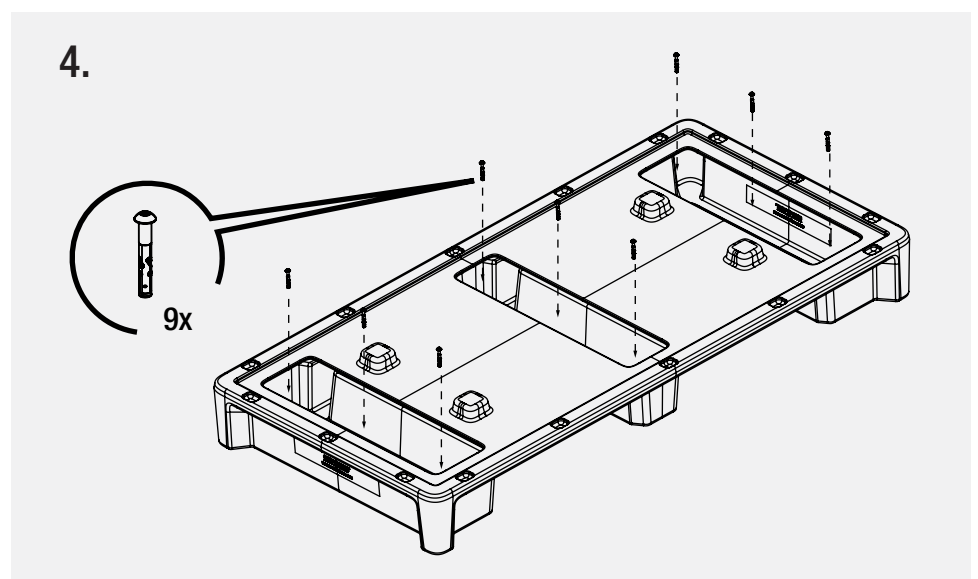

Replace the riser and use the concrete anchors to attach it to the ground.


Endurance Bed with Riser 2.0 - Installation Instructions

5.

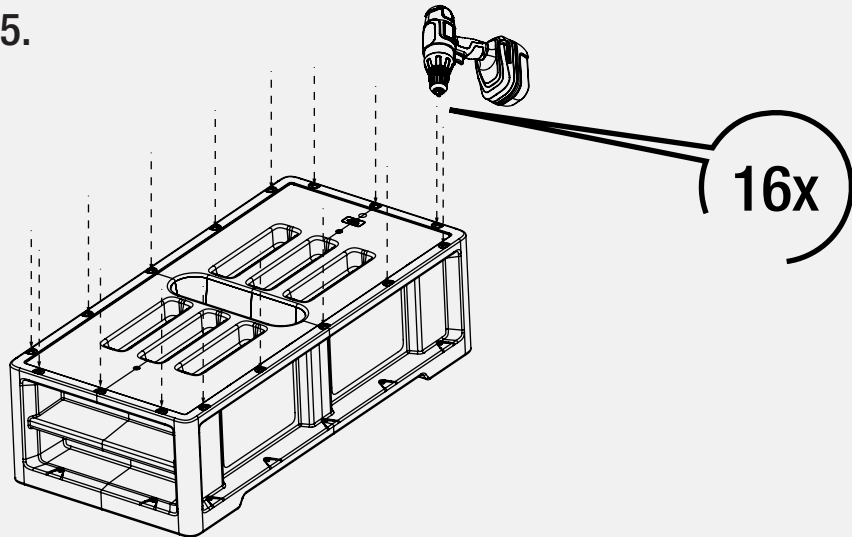


Drill out the preferred number of pilot holes in the 2.0 bed for attaching to the riser.

6.

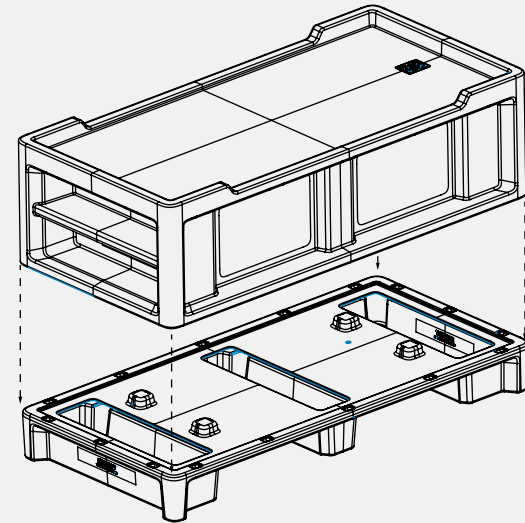


Place the 2.0 bed on top of the riser, it will key into place.

7.

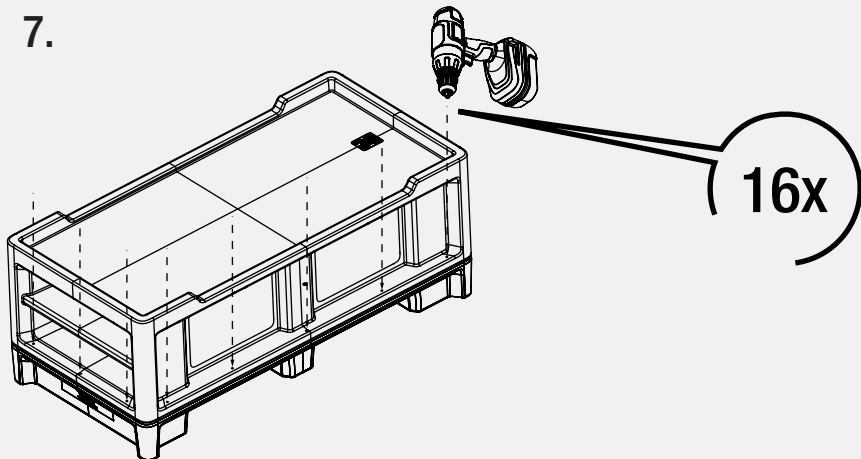

Use the locations of the previously drilled holes to then drill through the riser, ensuring the bolt locations line up.

8.

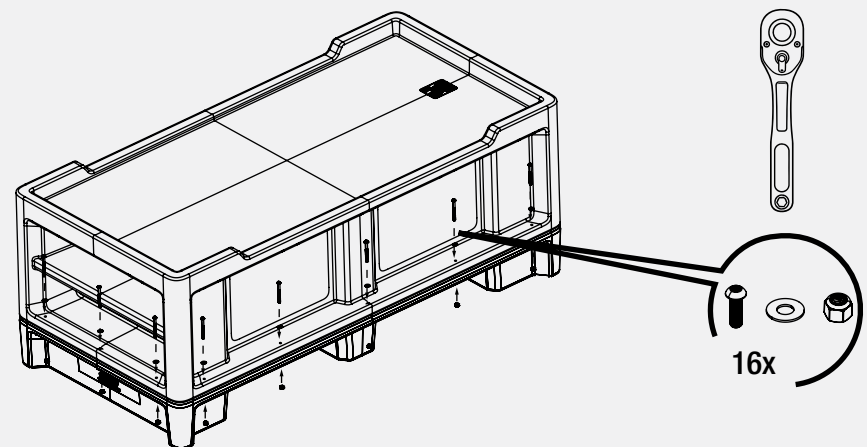

Using tamper resistant hardware attached the bed to the riser.