


TriTable Installation Instructions

CORTECH

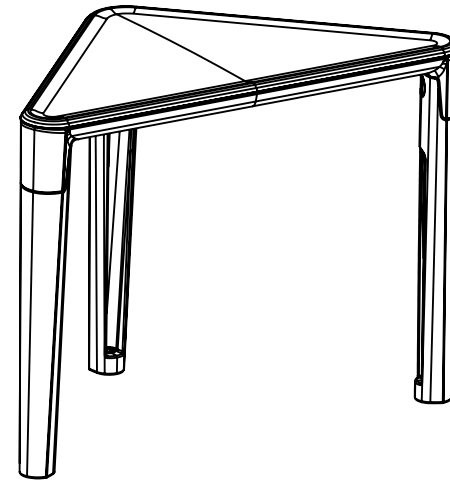


You will need:


Not Included:



1x
Screwdriver
With T45 Torx Bit

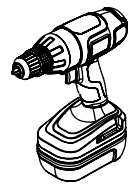


1x
Drill
With 3/8" Masonry Bit
and 1/2" Drill Bit



1x
Pencil
For Marking


Included:

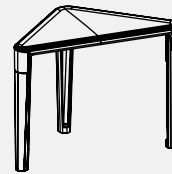

1x
Triangle Table




3x
3/8" - 3-3/4" Sleeve Anchors
- Torx Tamper-Resistant
Drive Type 45TXH




3x
Washer
13/32" ID - 1" OD

TriTable - Installation Instructions


CORTECH

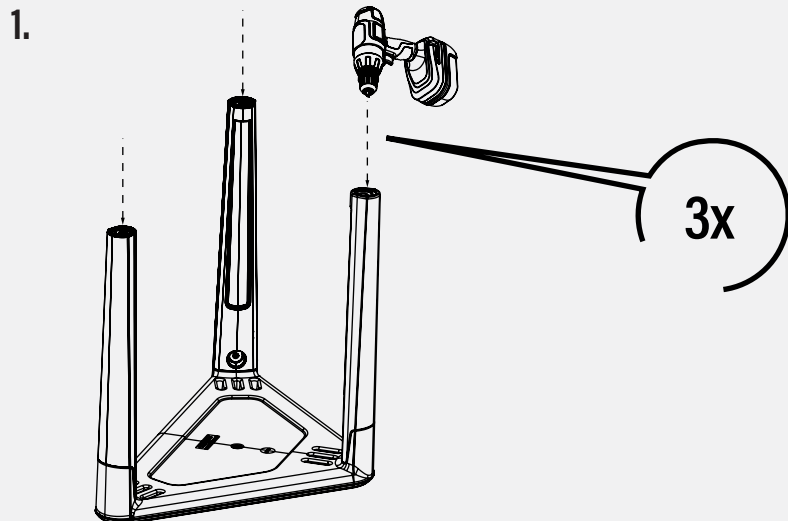


Flip table and locate pilot holes. Using 1/2" Drill bit, drill all 3 pilot holes.

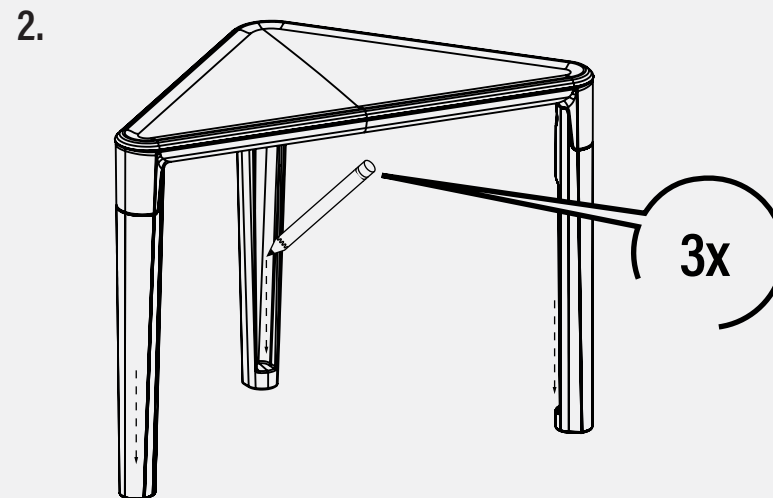

Put table in desired location. Using pilot holes, mark all 3 drill points.

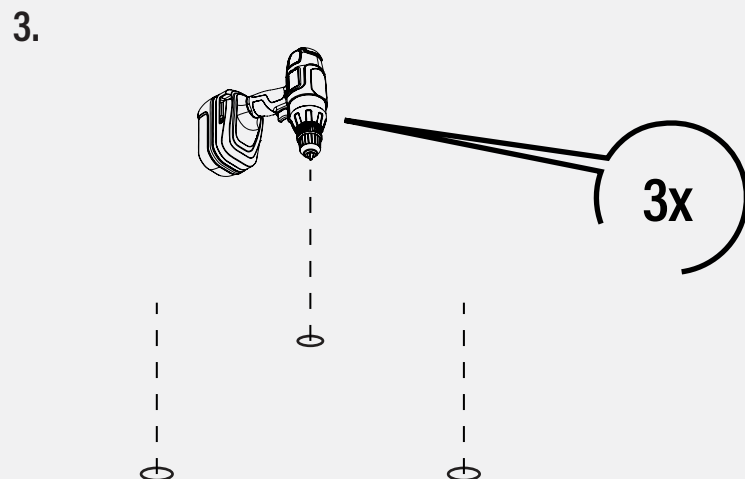

Remove table. Using 3/8" masonry bit, drill all 3 anchor points. Hole should be at least 1/2" deeper than embedment required. Blow hole clean of dust and debris.

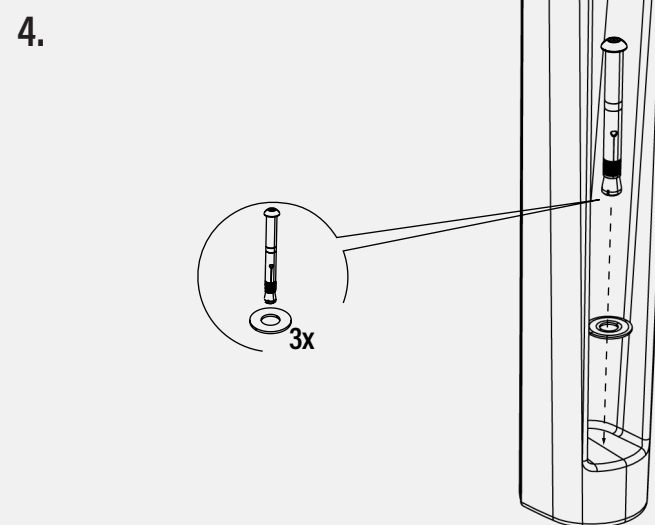

Replace Table. Drive 3/8" anchors through pilot holes and into the anchor points. Tighten anchor by turning the head 3-5 turns past finger tight.